

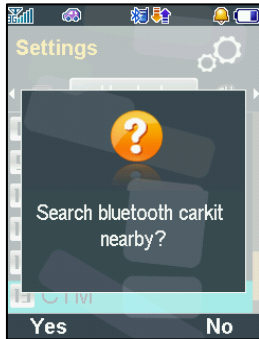
Introduction


Bluetooth is a wireless connection between the car kit and your handset. Once the handset is *authorised* it will automatically connect to the car kit whenever you are in range. The car kit should be correctly installed so that it switches off when the car ignition is off.

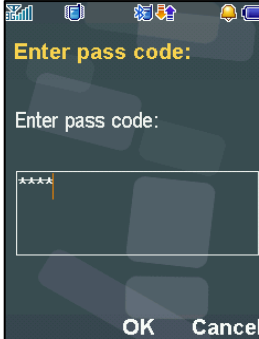
After Upgrading Your Handset

If you have just upgraded your handset then it is *essential* that you reset the car kit to defaults. Press and hold the Car Kit control key for 16 seconds until you hear 4 beeps in quick succession. Release the key, wait 4 seconds then power cycle the car kit. See your Car Kit user guide...

Normal Automatic Pairing using the Wizard

<p>1. Insert the handset into the Cradle. The car ignition (accessories) should be ON to enable power to the car kit</p>	
<p>The handset detects the car kit by sensing power on the charging pins. The handset starts charging and performs the following:</p> <ul style="list-style-type: none"> • Car Kit Profile* is switched on - the car icon appears in the information bar at the top of the handset display. • If Bluetooth is not already on then Bluetooth is switched ON indicated by the Bluetooth symbol in the information bar. • The auto-connect wizard starts. Press Yes to continue... 	

<p>2. The handset detects the car kit</p>	
<p>Highlight the device "ZTE_BT_v2.x" and press OK to continue...</p> <p>Notes The car kit is in 'Show' mode for 3 minutes after switching on. If the car kit is not detected then switch off the ignition and switch it back on again. Leave the handset in the cradle and press Search to find the car kit again.</p>	

<p>3. Enter the Pass Code '1234'</p>	
<p>Enter 1234 on your handset then press OK to continue...</p> <ul style="list-style-type: none"> • "Paired successfully. Connect to it as default connection?" • Select Yes • The handset and the car kit are now Connected • Calls made and received are now directed through the car kit. <p>Notes In this state the handset will prompt to Connect every time you are in range of the car kit (with the car kit switched on) If you wish to enable automatic connection then follow the additional steps below...</p>	

4. Authorise the handset to enable automatic Connection

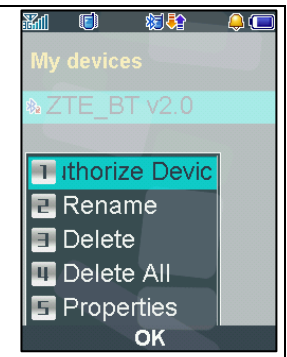
Menu > Tools > Bluetooth > My Devices

Select the car kit device ZTE_BT2.x

Press **Options > Authorise Device > OK > Yes**

Notes

Authorising the device allows the handset to connect automatically to the car kit without prompting. The Call Key on the cradle will flash once every 3 seconds to indicate a connected and authorised device.



* **Car Kit Profile** can be configured to your requirements. See your handset User Guide.

Set and Store your default Volume level on the Car Kit

1. Make a test call and set your desired volume level using the volume keys on the cradle.
2. Press and hold the cradle Call Key for four seconds until you hear 2 beeps together – the default volume level is stored and the handset shows Disconnected.
3. Press and hold the cradle Call Key for four seconds until you hear 2 beeps together to reconnect the handset.

Reset the Handset to defaults to re-enable the pairing wizard – delete existing devices

Menu > Tools > Bluetooth > My Devices > Options > Delete All

Hold the cradle key down for 16 seconds, **Beeps 1*, 12*, 123*, 1234✓** to reset the car kit.

Bluetooth Car Kit Feature Summary

What happens when	Paired and in the car (Authorised)	Paired and out of the car (Authorised)	Not Paired (ignition is off or handset out of range)
<p>Incoming Call</p>	<p>Incoming call will ring on the handset and the car kit. Press the Call button on the cradle to answer. Auto-answer can be set in the handset profiles: Menu > Settings > Profiles > Car Kit > Edit > Auto answer</p>	<p>Incoming call will ring on the handset and the car kit. Press the Call button on the handset to answer. Press Options > Switch to Handset to disconnect the call from the car kit.</p>	<p>Incoming call will ring on the handset. Press the Call button on the handset and use the phone as normal.</p>
<p>Outgoing Call</p>	<p>Select the Contact on the handset, use Speed Dial or enter the number manually on the keypad. The audio will be presented to the car kit. See your handset user guide to check features such as Speed dial.</p>	<p>Select the contact on the handset, use Speed Dial or enter the number manually on the keypad. The audio will be presented to the car kit. Press Options > Switch to Handset to disconnect the call from the car kit.</p>	<p>Select the contact on the handset, use Speed Dial or enter the number manually on the keypad. Use the phone as normal</p>